

# RODEC® Spare parts list for CL1201

No.	English Name	Chinese Name	specification	Q'ty	material	price
1	charger	充电器		1		
2	battery	电池包		1		
3	The host is connected with the bracket	主机连接支架		1		
4	host link	主机连接片		1		
5	back cover	后罩		1		
6	switch	开关		1		
7	L/F button	正反转拨杆		1		
8	right housing	右机壳		1		
9	screw	十字自攻螺钉		6		
10	cutting sleeve	轴卡		1		
11	torsional spring	扭力弹簧		1		
12	screw-on ring	螺纹圈		1		
13	retaining spring	定位弹片2H		1		
14	Torque cup	扭力杯		1		
15	bearing	6800轴承		2		
16	chuck	手紧钻夹头		1		
17	screw	平机反牙螺丝		1		
18	spindle	牙箱体		1		
19	Third inner ring gear	钢珠		12		
20	pin	扭力垫片		1		
21	round pin	销		2		
22	second spindle sleeve	牙箱体第二层垫片		1		
23	washer	输出轴		1		
24	Third inner ring gear	第三层内齿圈		1		
25	Third layers of the planet wheel	第三层行星齿		5		
26	planet wheel	行星轮架		1		
27	Gasket	垫片		1		
28	front cover	前罩		1		
29	cross screw	十字槽盘头自攻螺丝		8		
30	spring	高低速拨档弹簧		1		
31	Second layers of the planet wheel	第二层行星轮		5		
32	The third layer of the sun wheel	第三层太阳轮		1		
33	adjusting ring	调节圈		1		
34	rivet	铆钉		4		
35	ring	变速内齿环		1		
36	first inner ring gear	第一层内齿圈		1		
37	second layer of the sun wheel	第二层太阳轮		1		
38	first layers of the planet wheel	第一层行星轮		3		
39	first spindle sleeve	第一层压箱垫片		1		
40	cross screw	十字槽盘头自攻螺丝		2		
41	Motor gear	马达齿		1		
42	display	电量显示板		1		
43	cover	端盖		1		
44	high and low speed button	档位推扭		1		
45	spring	拨档弹簧		2		
46	left housing	左机壳		1		
47	motor	电机12V双速高端T		1		