

RODEE® spare parts list for CL1801

No.	English Name	Chinese Name	specification	Q'ty	material	price
1	charger	充电器		1		
2	battery	电池包		1		
3	The host is connected with the bracket	主机链接支架		1		
4	host link	主机链接片		1		
5	back cover	后罩		1		
6	switch	开关		1		
7	L/F button	正反转拔杆		1		
8	right housing	右机壳		1		
9	screw	十字自攻螺钉		6		
10	washer	10轴用弹性挡圈		1		
11	Spring	扭力弹簧		1		
12	fillet of screw	螺纹圈		1		
13	Torque locating shrapnel	扭力定位弹片		1		
14	Torque cup	扭力杯		1		
15	bearing	轴承		2		
16	chuck	自锁夹头		1		
17	screw	十字半沉头左旋螺钉		1		
18	spindle	牙箱体		1		
19	Third inner ring gear	钢珠		12		
20	pin	扭力调整垫		1		
21	pin	3X29.2牙箱销		2		
22	second spindle sleeve	第二层牙箱垫片		1		
23	washer	输出轴		1		
24	Third inner ring gear	第三层内齿圈		1		
25	Third layers of the planet wheel	第三层行星轮		5		
26	planet carrier	行星架		1		
27	washer	垫片		1		
28	front cover	前罩		1		
29	screw	十字盘头螺钉		8		
30	High low speed shrapnel	高低速定位弹片		1		
31	Second layers of the planet wheel	第二层行星轮		5		
32	The third layer of the sun wheel	第三层太阳轮		1		
33	H/L speed cover	高低速滑套		1		
34	rivet	铆钉		4		
35	Second inner ring gear	第二层内齿圈		1		
36	first inner ring gear	第一层内齿圈		1		
37	second layer of the sun wheel	第二层太阳轮		1		
38	first layers of the planet wheel	第一层行星轮		3		
39	first spindle sleeve	第一层压箱垫片		1		
40	screw and washer sets	十字螺钉和弹性垫圈组合		2		
41	Motor gear	马达齿轮		1		
42	display	电量显示板		1		
43	Motor bracket	马达支架		1		
44	high and low speed button	高低速按钮		1		
45	Spring	弹簧		2		
46	left housing	左机壳		1		
47	motor	550马达18V		1		