



spare part list for RS0801

NO.	part name	chinese name	specification	Q'ty	material	price
1	Power card	电缆线		1		
2	Card guard	电缆护套		1		
3	Screw	自攻螺钉	ST4.2x14	2		
4	Cord clip	电缆压板		1		
5	Trigger	开关		1		
6	Left housing	左机壳		1		
7	Left label	标贴		1		
8	Commutation spring	弹簧		1		
9	Commutation push plate	推钮		1		
10	housing	主机壳		1		
11	Brush holder	刷握		2		
12	Carbon brush	碳刷		2		
13	Brush holder cover	刷握盖		2		
14	Right housing	右机壳		1		
15	Screw	自攻螺钉	ST4x20	8		
16	Right label	标贴		1		
17	Stator	定子		1		
18	Screw	自攻螺钉	ST4x59	2		
19	wind scooper	导风圈		1		
20	Bearing	球轴承	607Z	1		
21	Bearing	球轴承	607Z	1		
22	Rotor	转子		1		
23	Screw	螺钉	M4x6	3		
24	Seal	弹垫圈		3		
25	Weather board	压板		1		
26	Shaft collar	轴用档圈		1		
27	Aluminum capsule	头壳		1		
28	Washer	垫片		1		
29	Screw	螺钉	M5x12	1		
30	Screw	螺钉	M5x18	4		
31	Spring washer	弹垫圈		4		
32	Aluminum housing lower cover	铝壳		1		
33	Screw	螺钉	M5x14	2		
34	Washer	垫片		2		
35	Tool rest dead plate			1		
36	Screw	螺钉	ST4x25	4		
37	Sleeve	隔热套		1		
38	Fixing plate			1		
39	Pivoting shoe			1		
40	Bearing	轴承	608Z	1		
41	Hole collar	孔用档圈		1		
42	Bearing	轴承	6000Z	1		
43	Washer	垫片		1		
44	Gear	齿轮		1		
45	Gear shaft	齿轮轴		1		
46	Transmission shaft	销轴		1		

47	Roller bearing	滚针轴承		1		
48	Cover	密封垫		1		
49	Reciprocating shaft	往复杆		1		
50	Powder ball bearing	轴承		1		
51	Wool seal	垫片		1		
52	ring	O型圈		1		
53	Pin	销轴		1		
54	Pin	销轴		1		
55	Spring	弹簧		1		
56	Blade internal sleeve	导套		1		
57	Torsional spring			1		
58	Blade outer sleeve	外导套		1		
59	Axis baffle			1		
60	Upper cover	端盖		1		
61	Aluminum cover	小上盖		1		
62	Aluminum upper cover	铝上盖		1		
63	Screw	螺钉	M4x8	1		
64	Washer	垫片		4		
65	Spring washer	弹簧垫圈		4		
66	Screw	螺钉	M4x18	4		